


16000 - Lens Tube Removal & Installation


Removal:

1. Loosen the lens clamp with a Phillips screw driver.

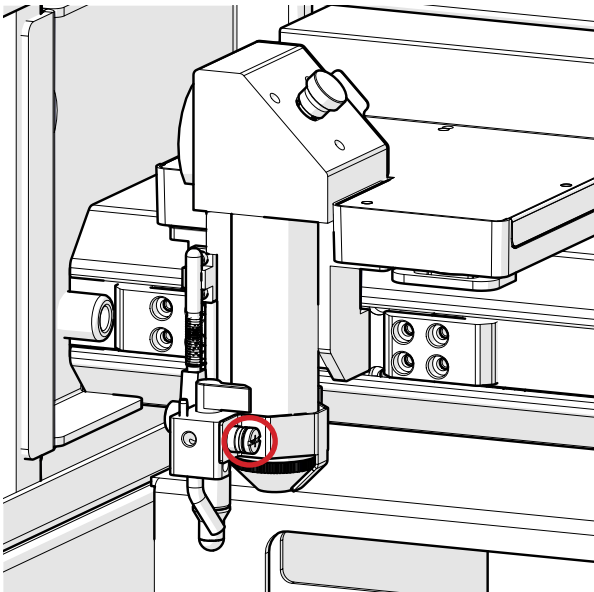


2. Hold the lens tube in place to prevent it from falling out.

3. Remove the lens tube.

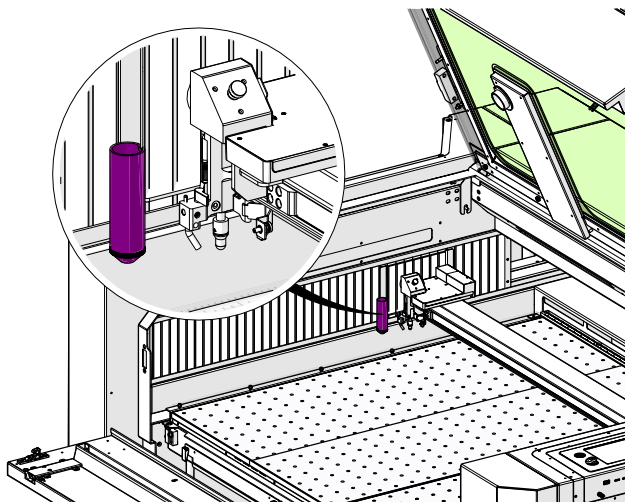

Installation:

1. Align slot on lens tube with rear of laser.

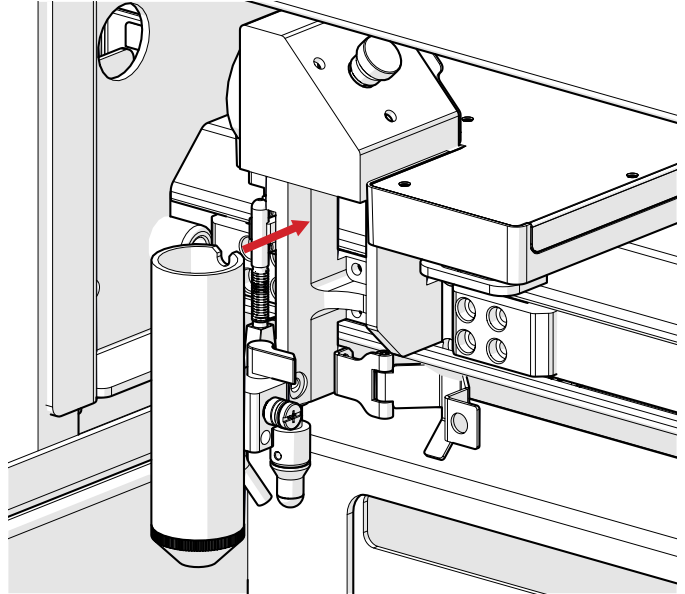

2. Make sure the lens tube is seated properly. It should lock into place and not spin.

3. Tighten the lens tube clamp with a Phillips screw driver.

