


Door Glide Replacement G100

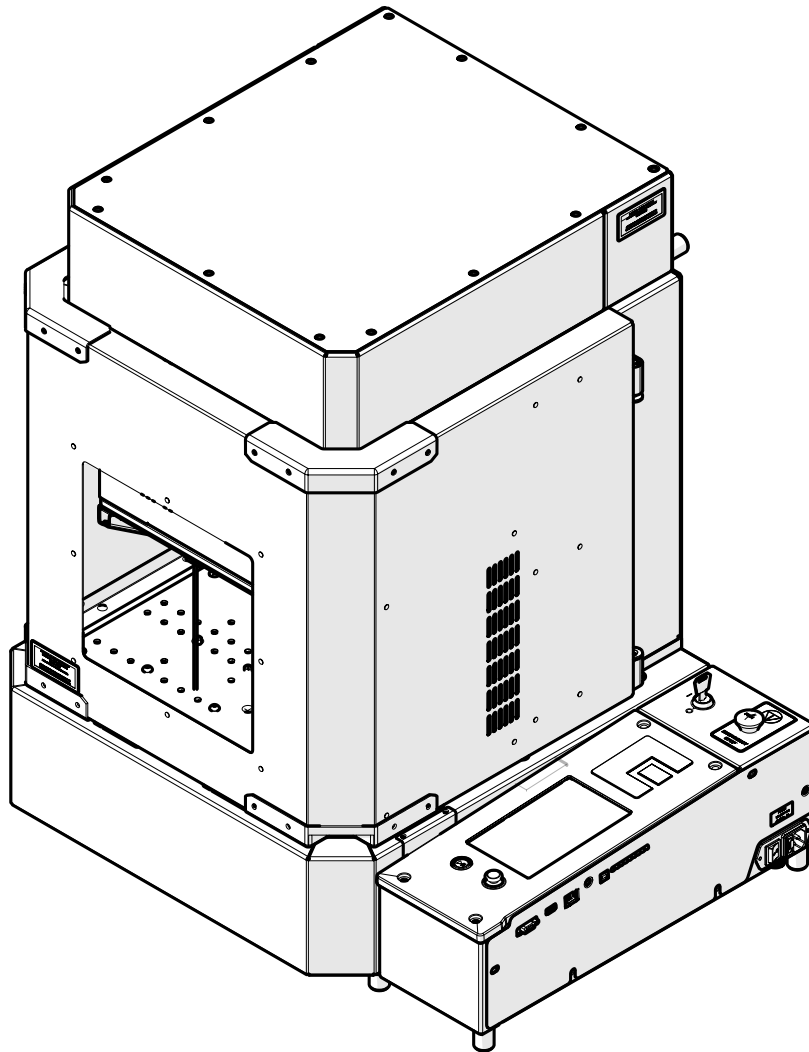

Parts Required


- GC0169 - Drawer Slide, 14 Inch, Pair
 - Two pairs needed for complete replacement

Tools Required


- T30 Torx Driver
- T20 Torx Driver
- Phillips Head Screwdriver

Door Glide Removal


1. Turn off engraver

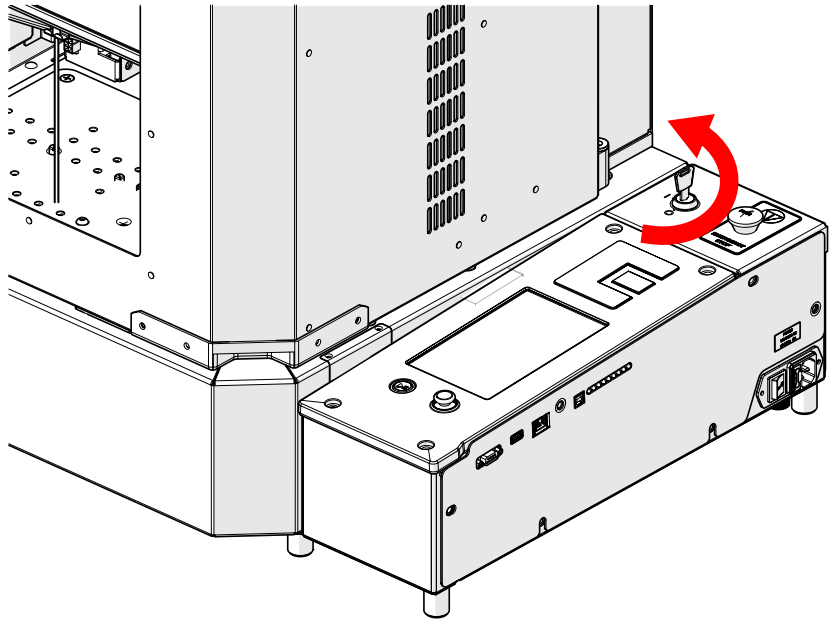


2. Disconnect from power

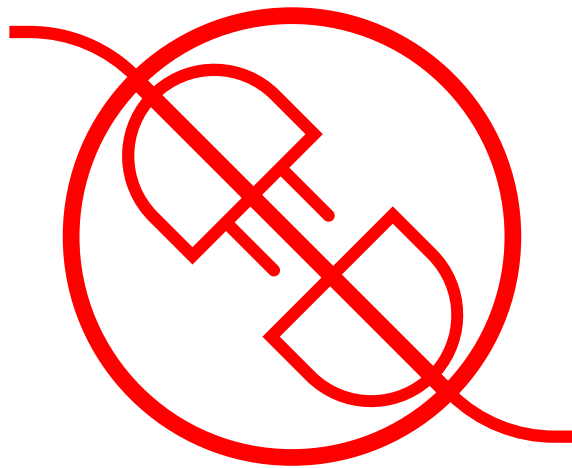


3. Loosen and remove

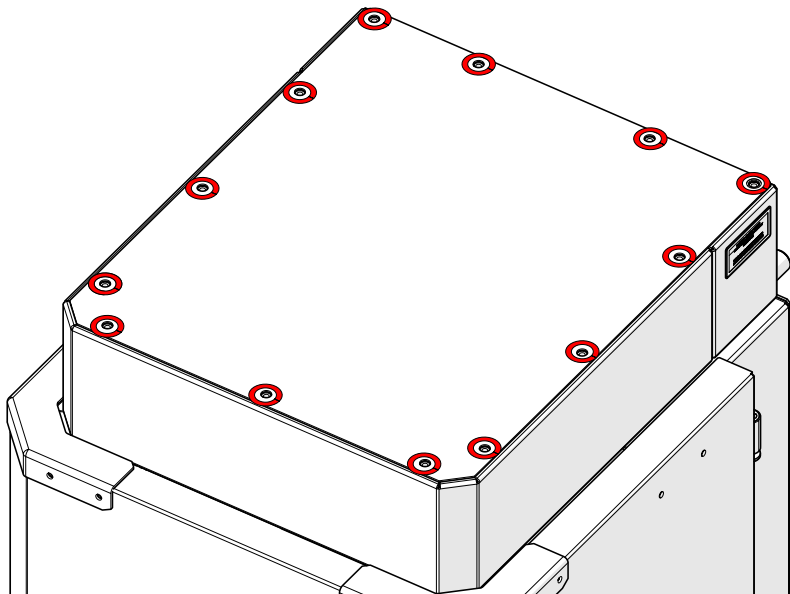


4. Remove panel

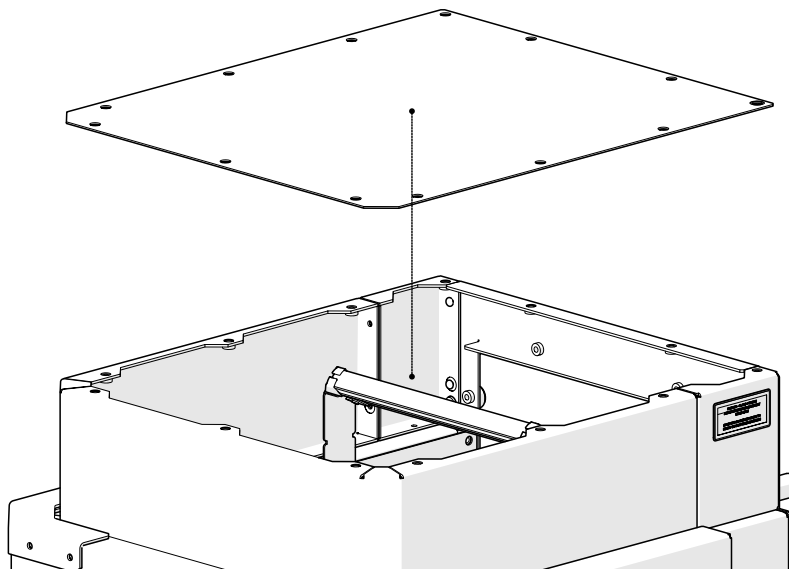


5. Loosen and remove

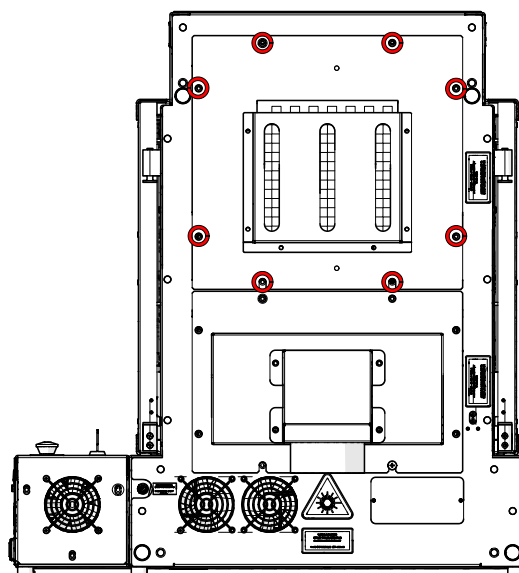


6. Remove panel

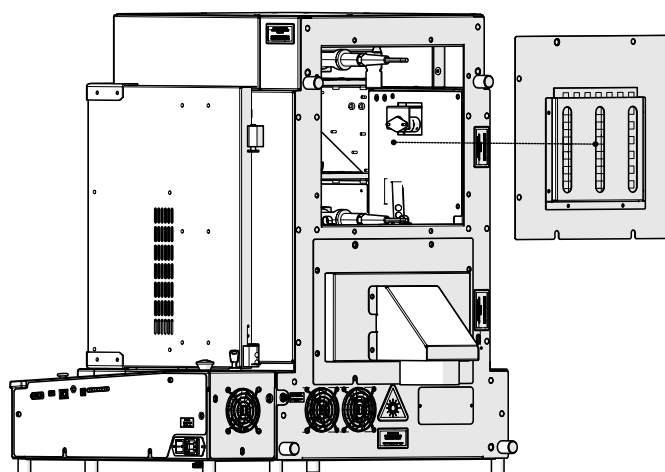


7. Loosen and remove

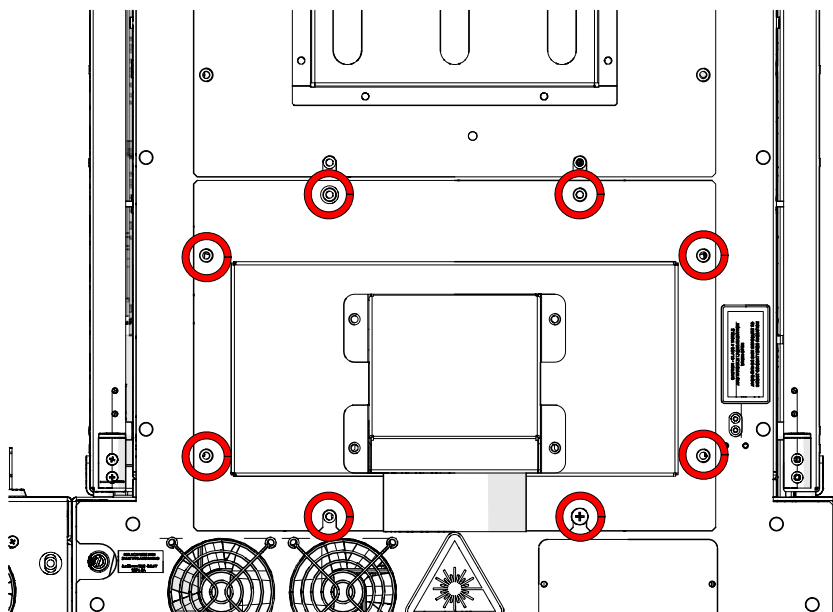


8. Remove panel

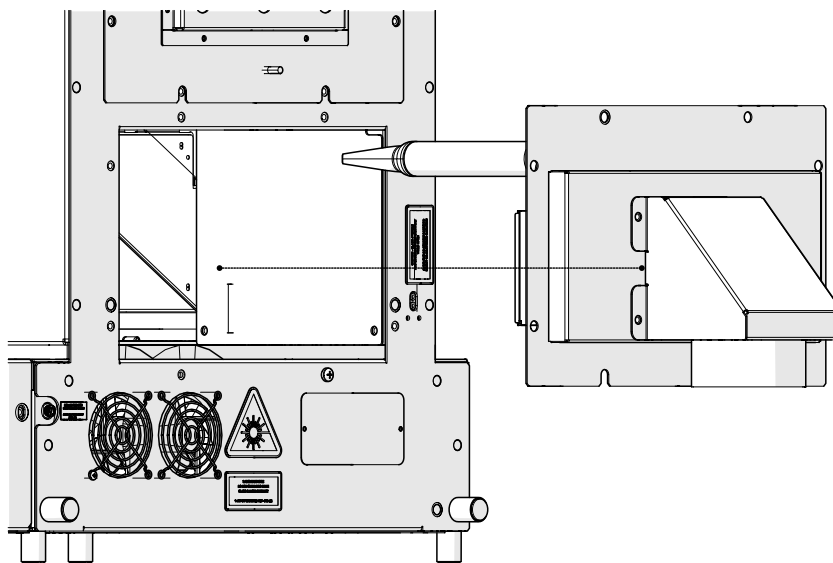


9. Loosen and remove

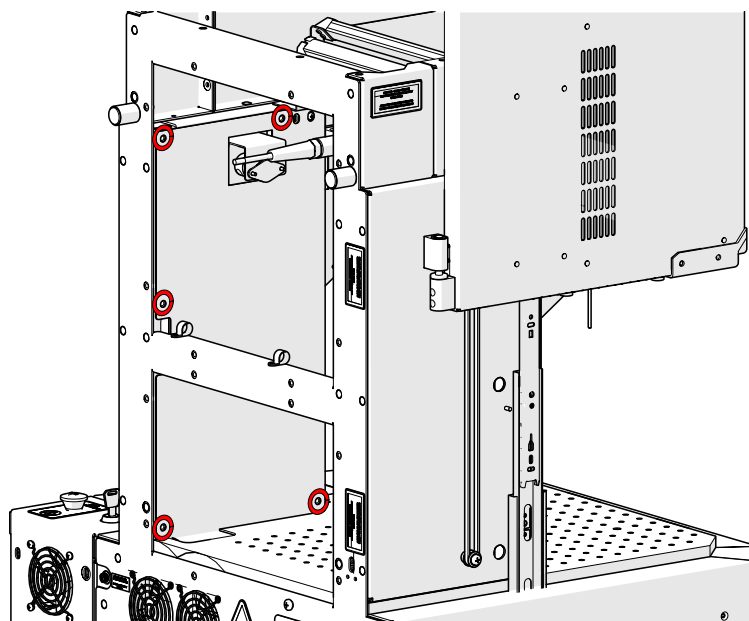


10. Remove panel

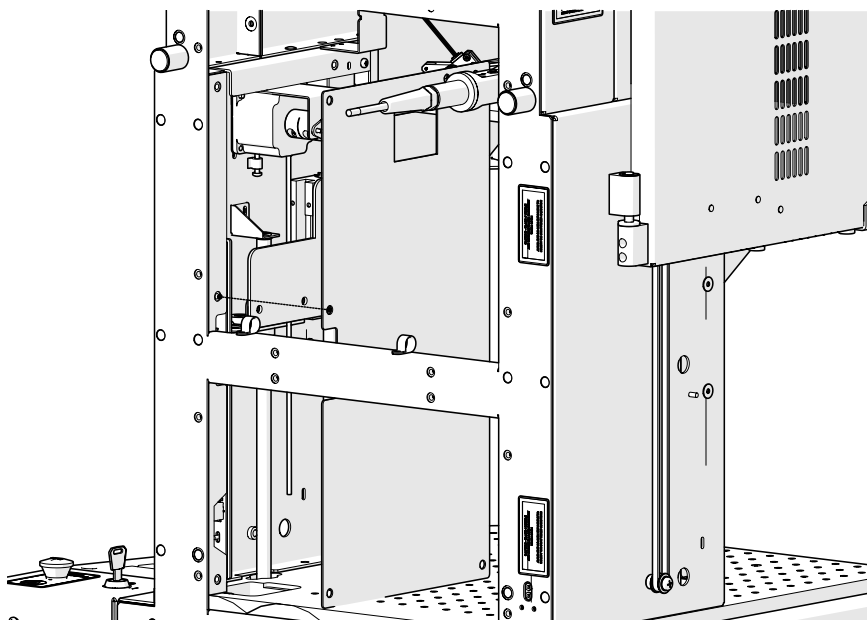


11. Loosen and remove

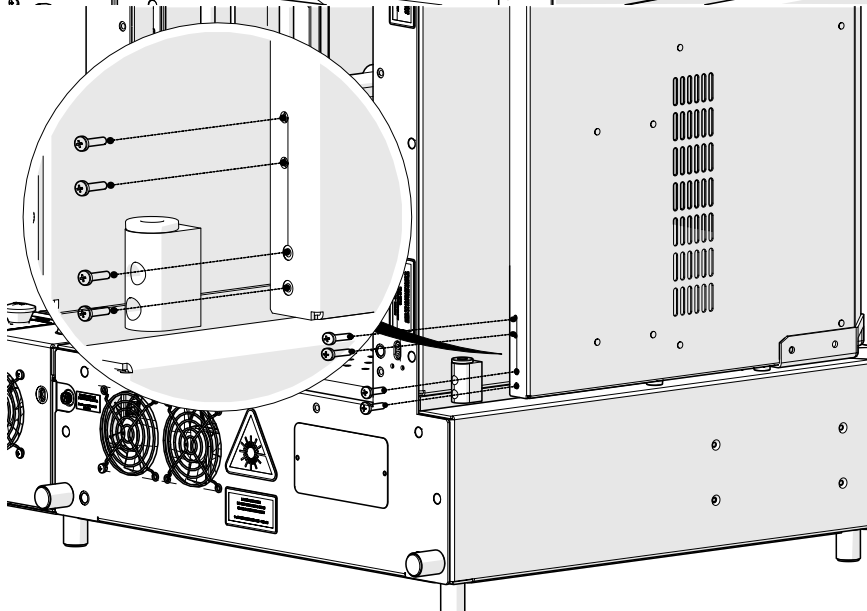


12. Loosen and remove

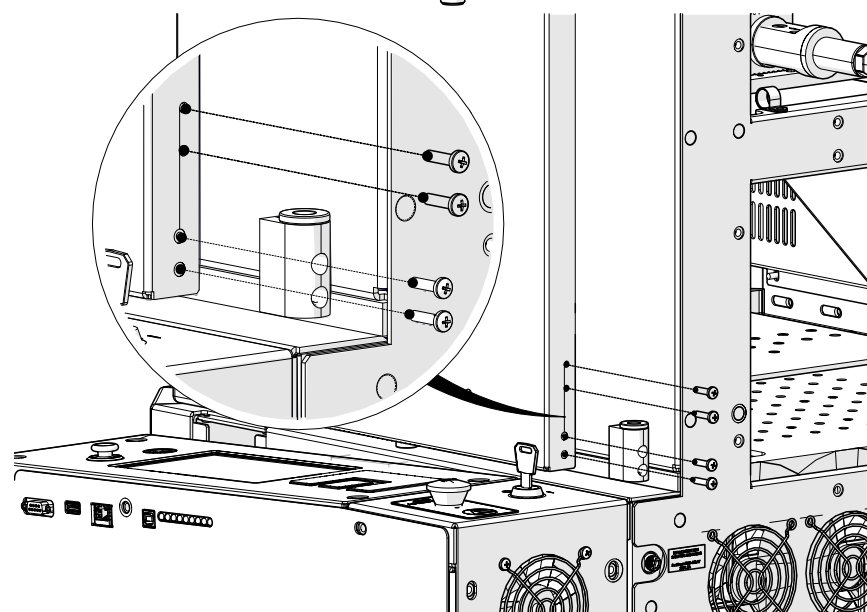


13. Tilt engraver

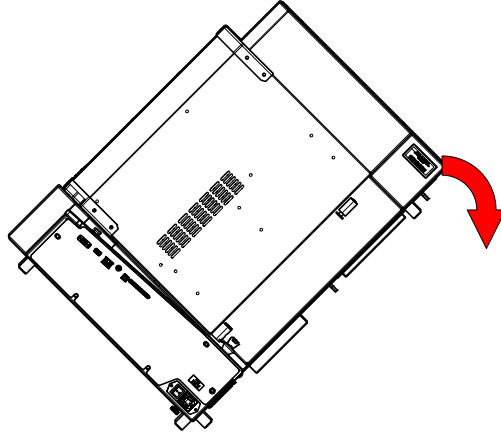

14. Lay engraver on back

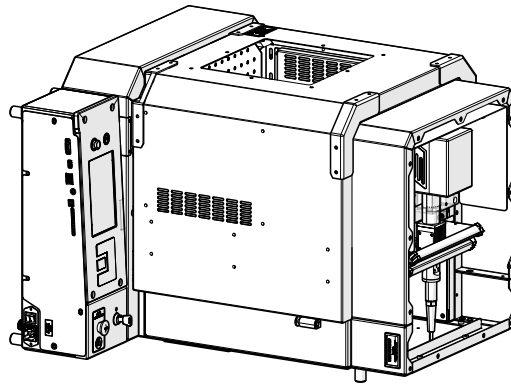


15. Open door

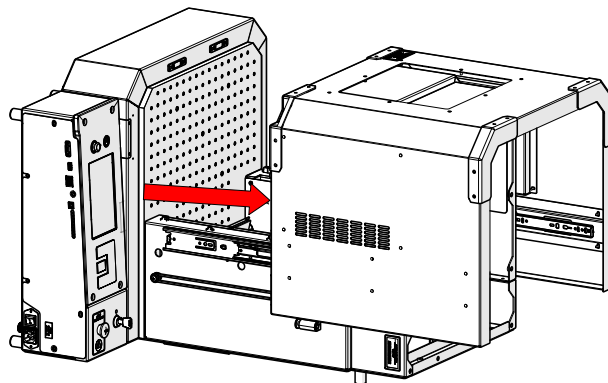


18000 - Door Glide Replacement


16. Depress slide lever

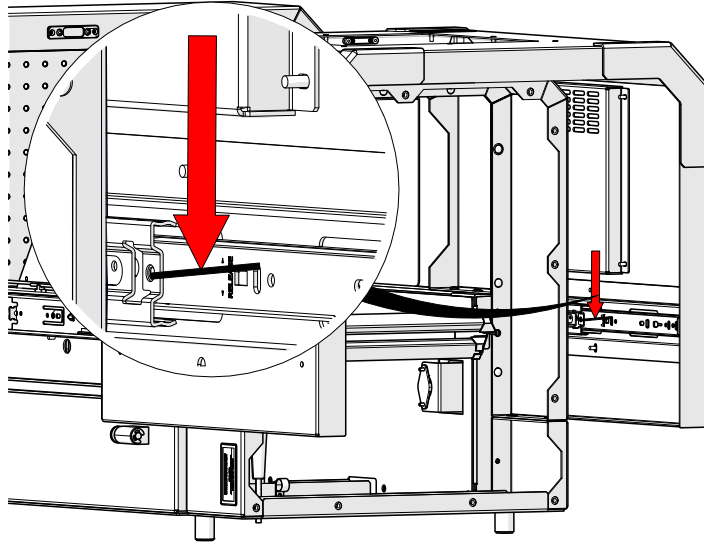

17. Depress slide lever

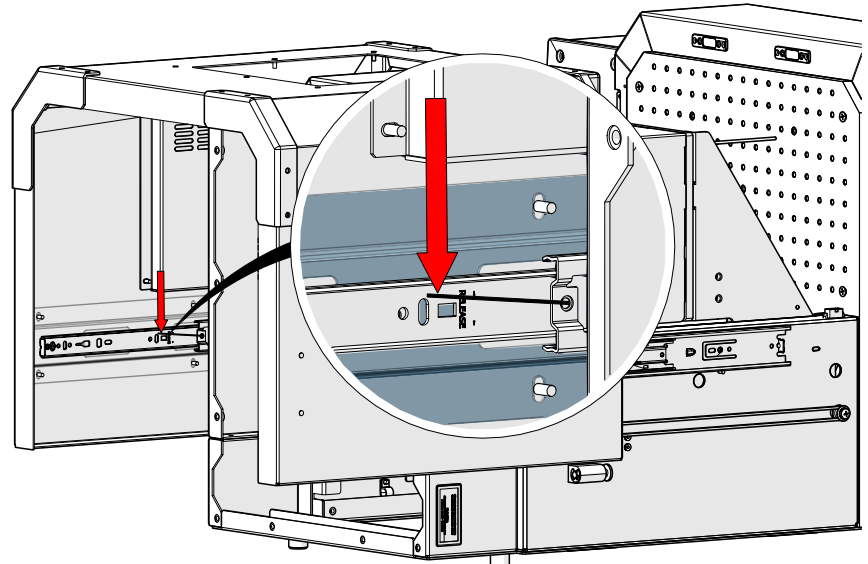


18. Remove door

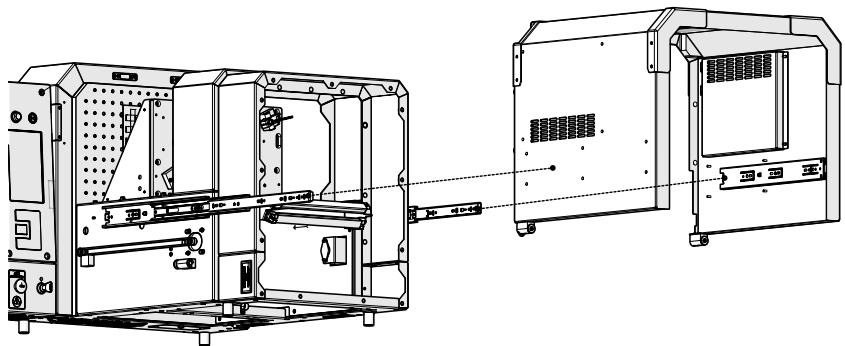


18000 - Door Glide Replacement


16. Loosen and remove

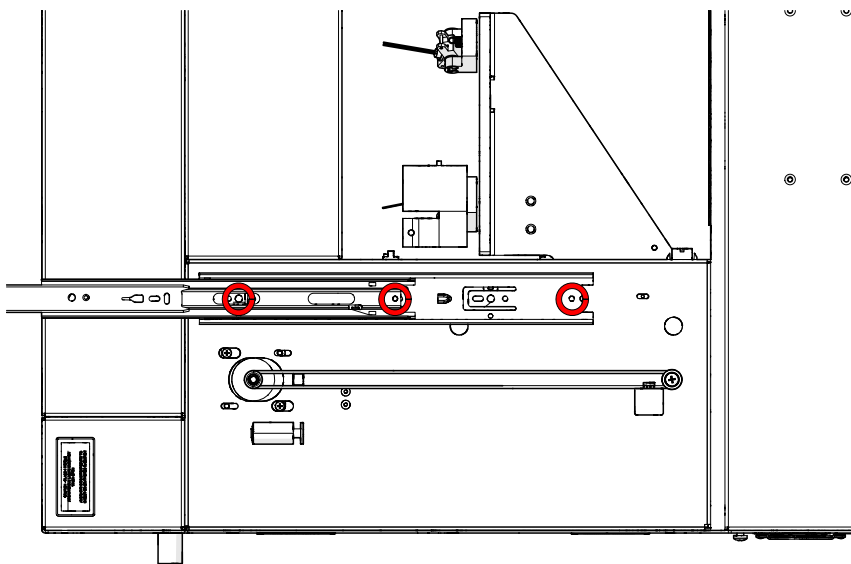


17. Remove slide

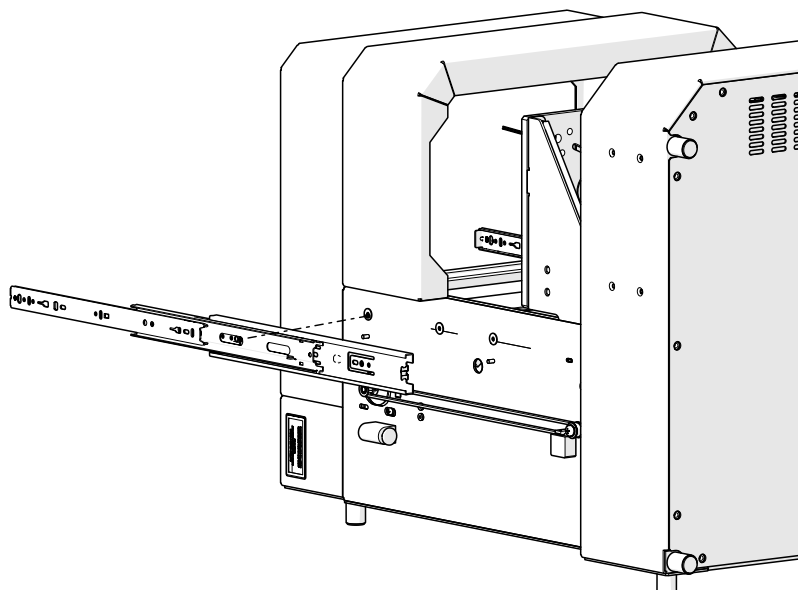

18. Loosen and remove

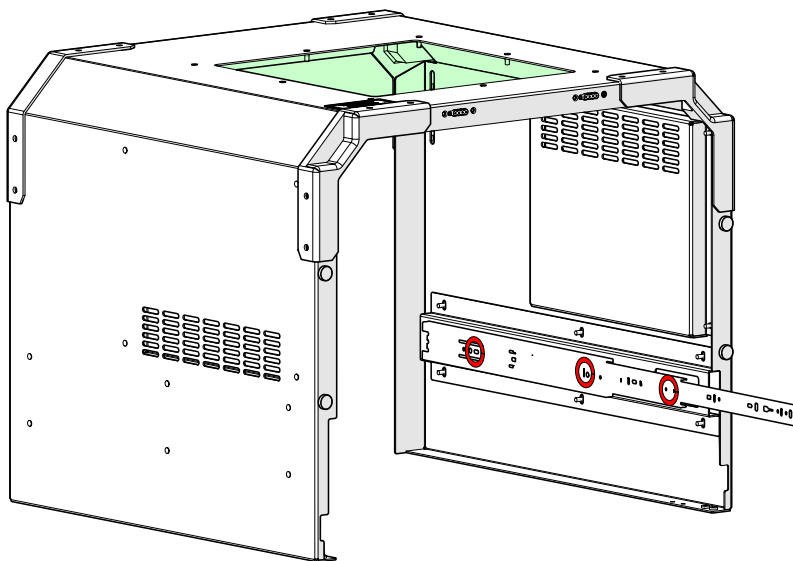


16. Remove slide

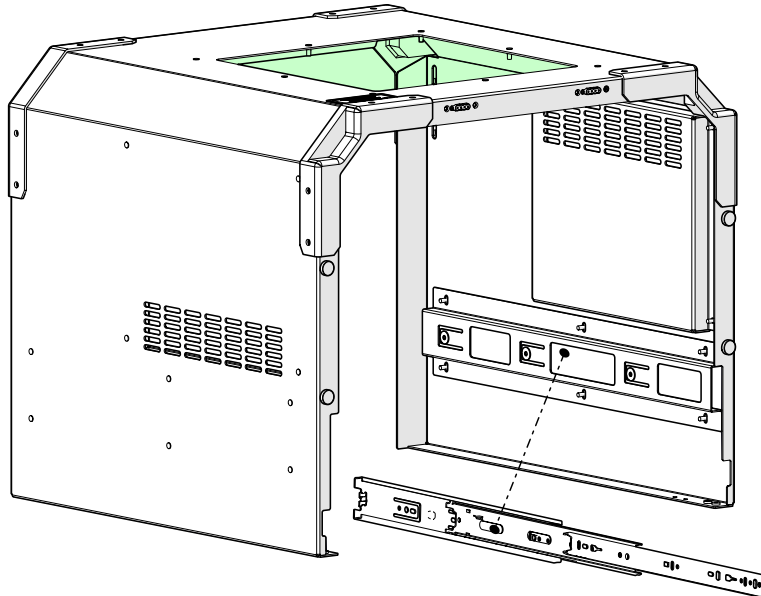


Door Slide Installation

1. Install slide

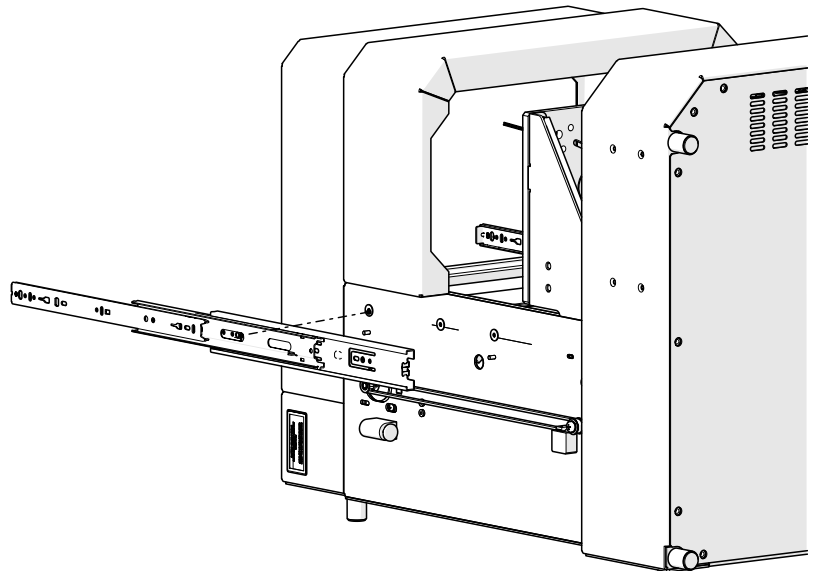


2. Install and tighten

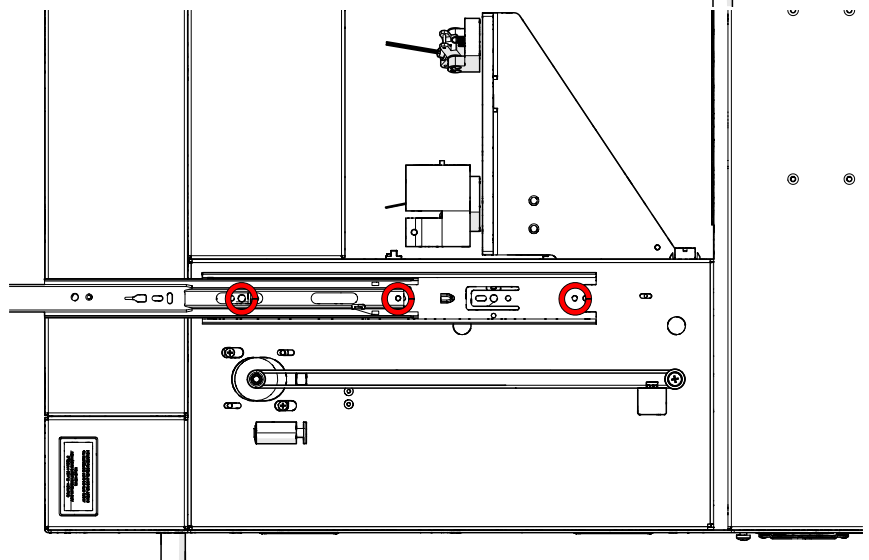


18000 - Door Glide Replacement


3. Install slide

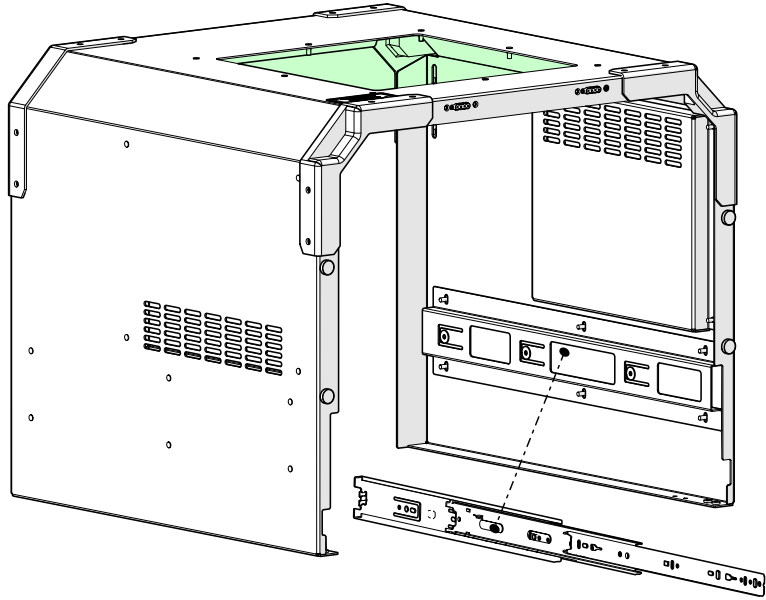

4. Install and tighten

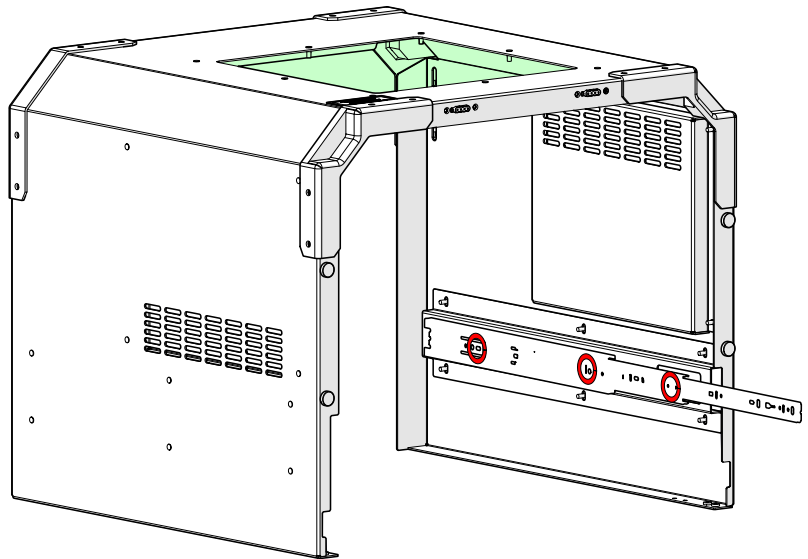


5. Position belt block at bottom of travel

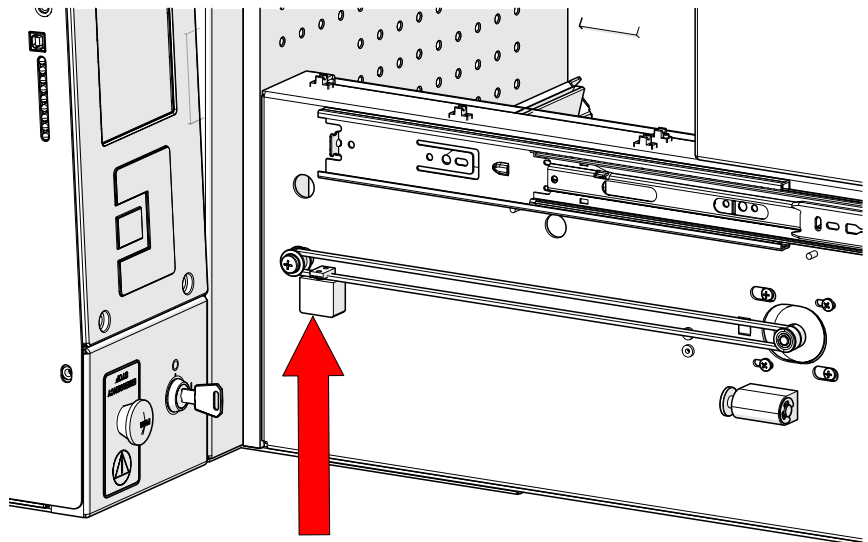


18000 - Door Glide Replacement


4. Place door on engraver

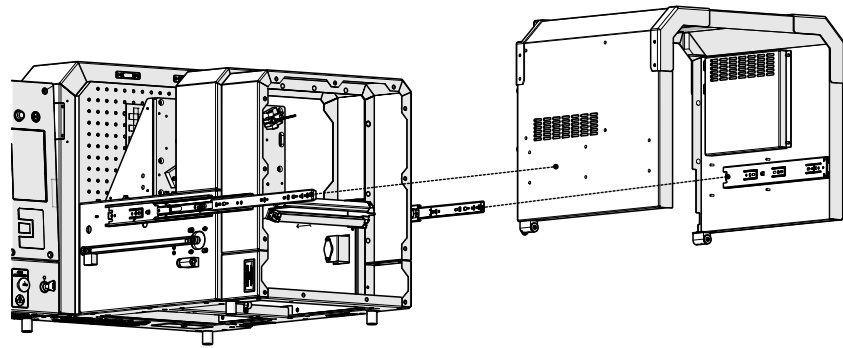


5. Ensure door is on slides

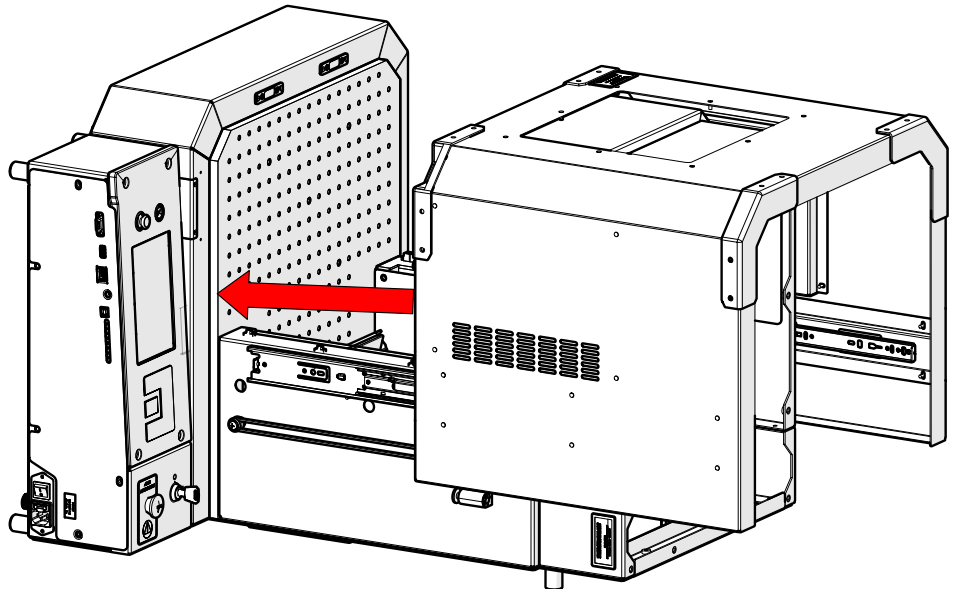


6. Return engraver to upright position

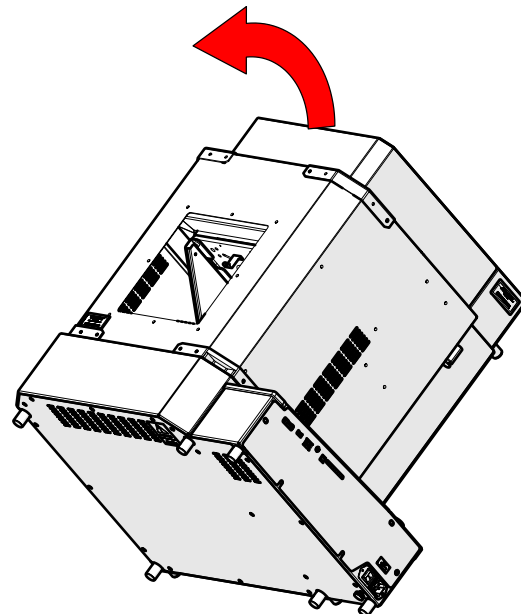


7. Install and tighten

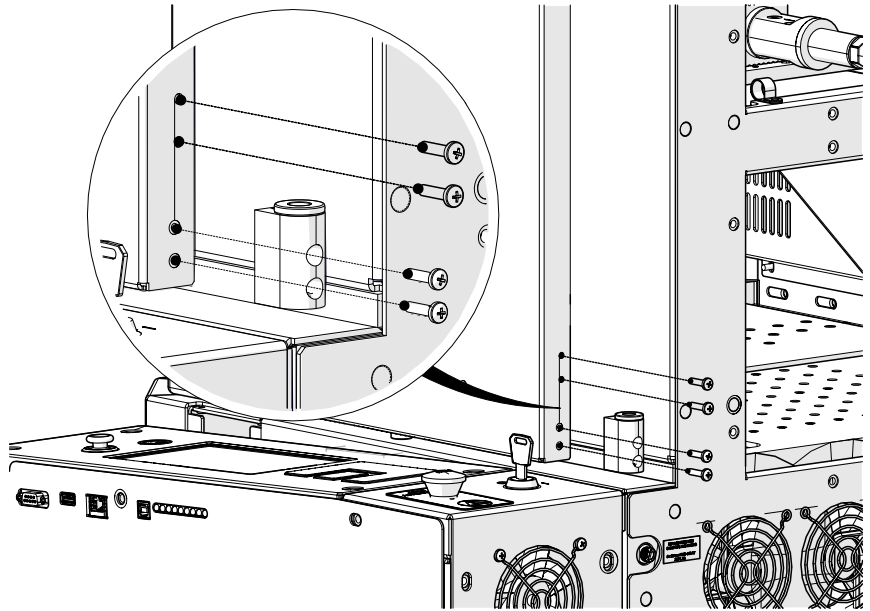


8. Install and tighten

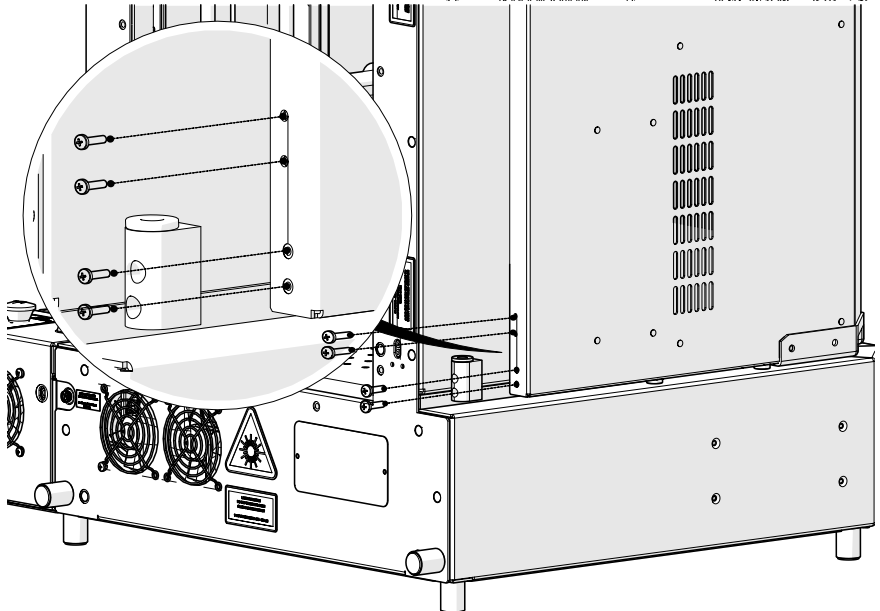


9. Install panel

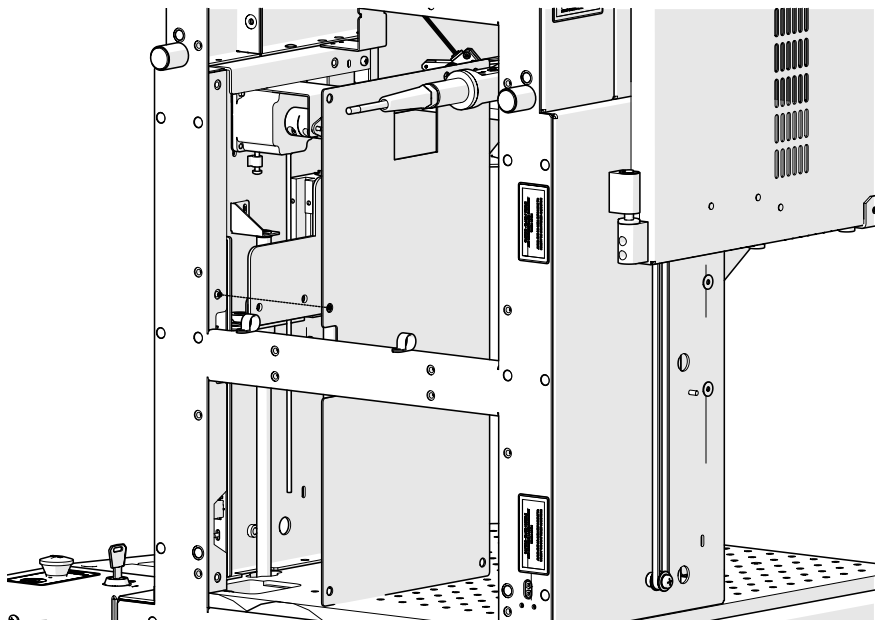

10. Install and tighten

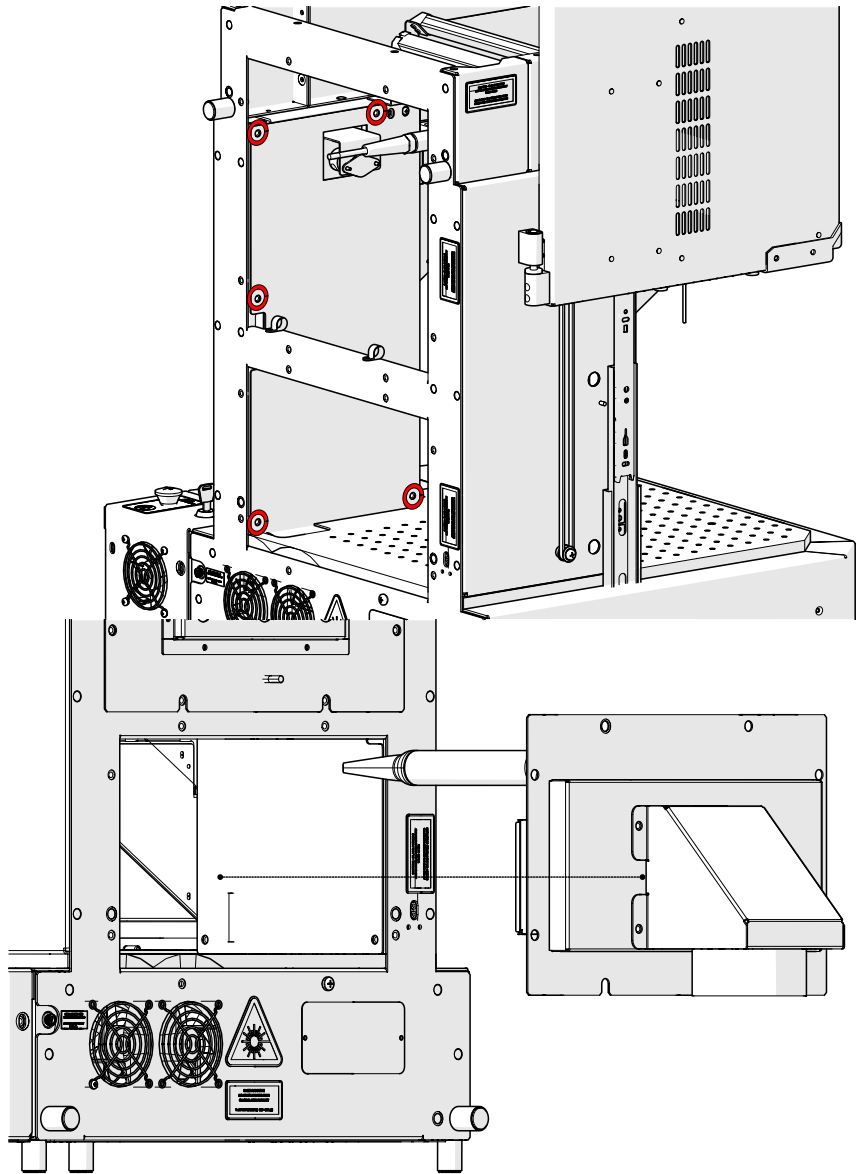


11. Install panel

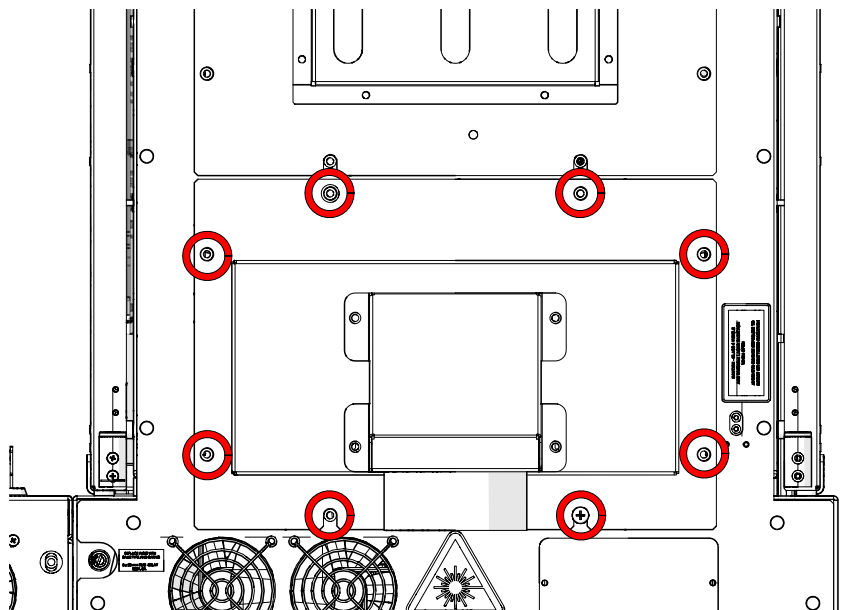


12. Install and tighten


13. Install panel

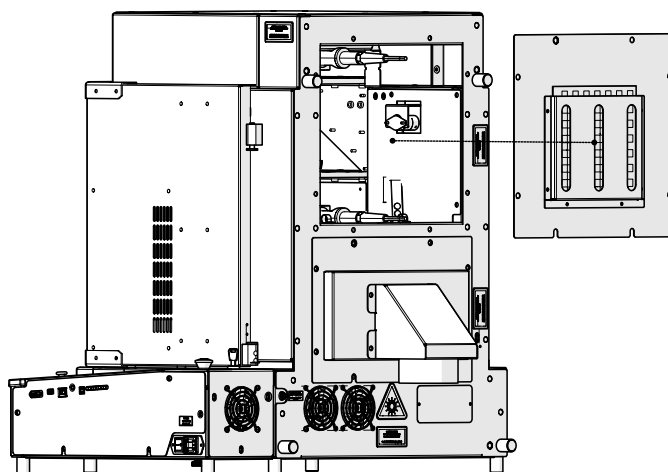


14. Install and tighten

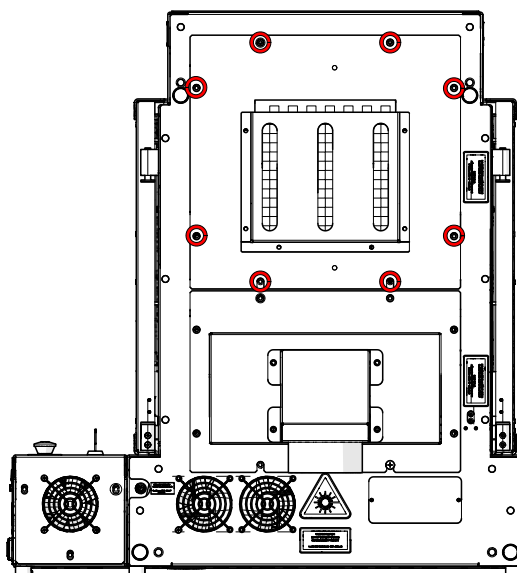


15. Install panel

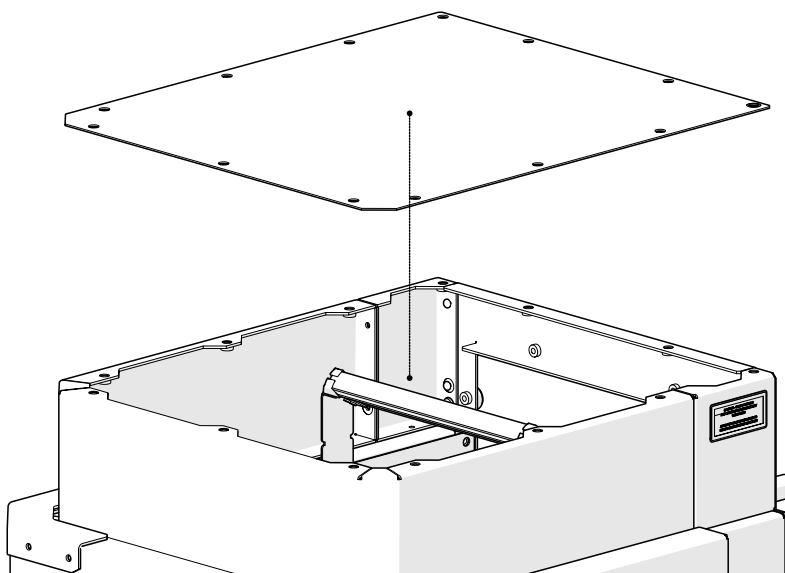

16. Install and tighten

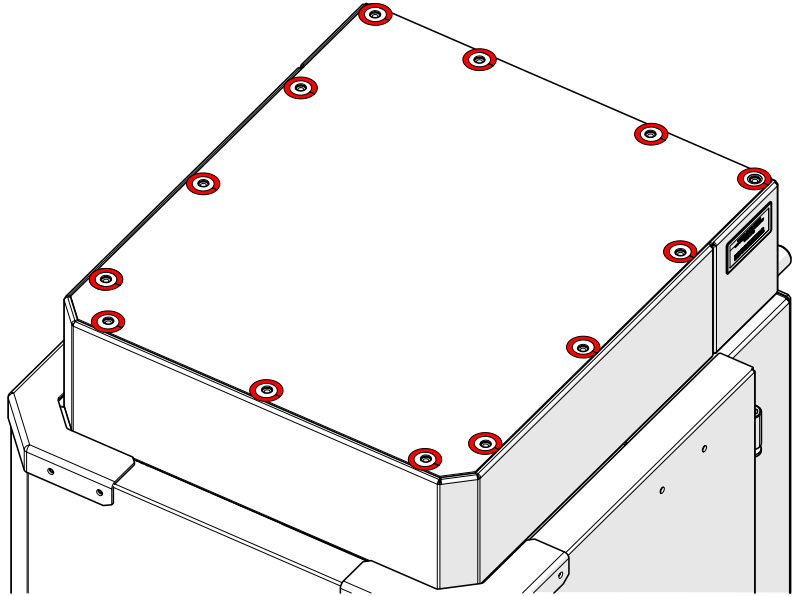

17. Connect to power

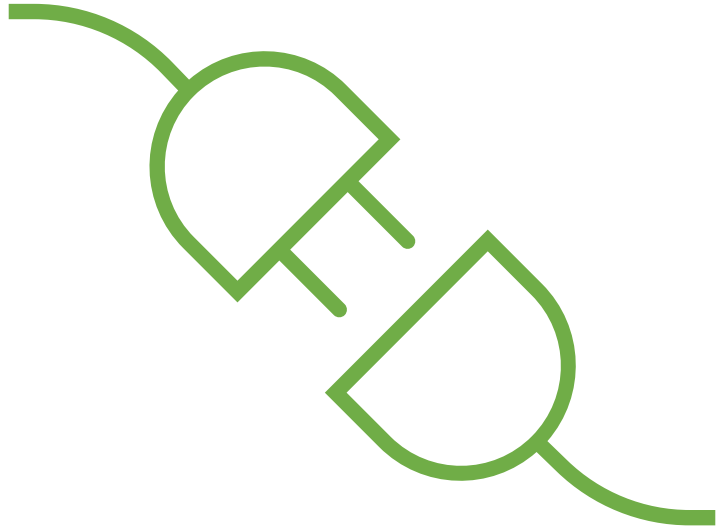

If further assistance is required, please contact Epilog Laser Technical Support by phone at 303-215-9171, or by email at tech@epiloglaser.com.

