


## Lens Replacement G100

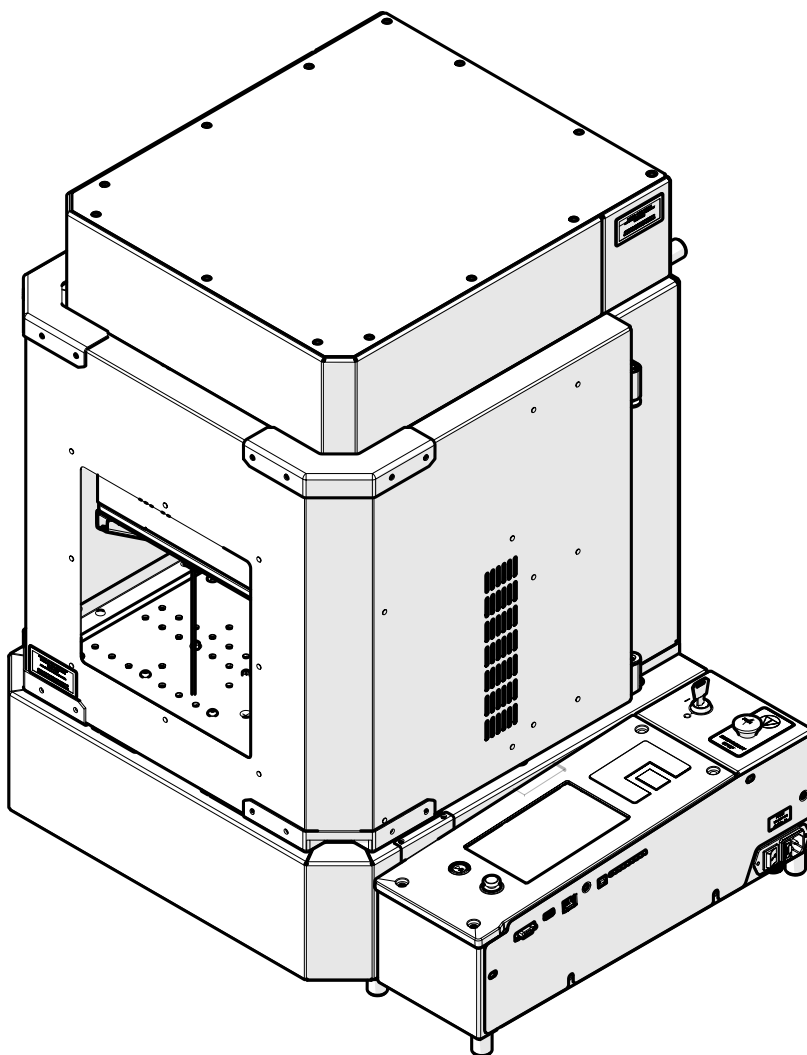

### Parts Required


- GC0275 - Assy, Lens, F254 (6" x 6" field)
- GC0270 - Assy, Lens, F163 (4" x 4" field)

### Tools Required


- n/a

## 18000 - Lens Replacement


1. Power off engraver.

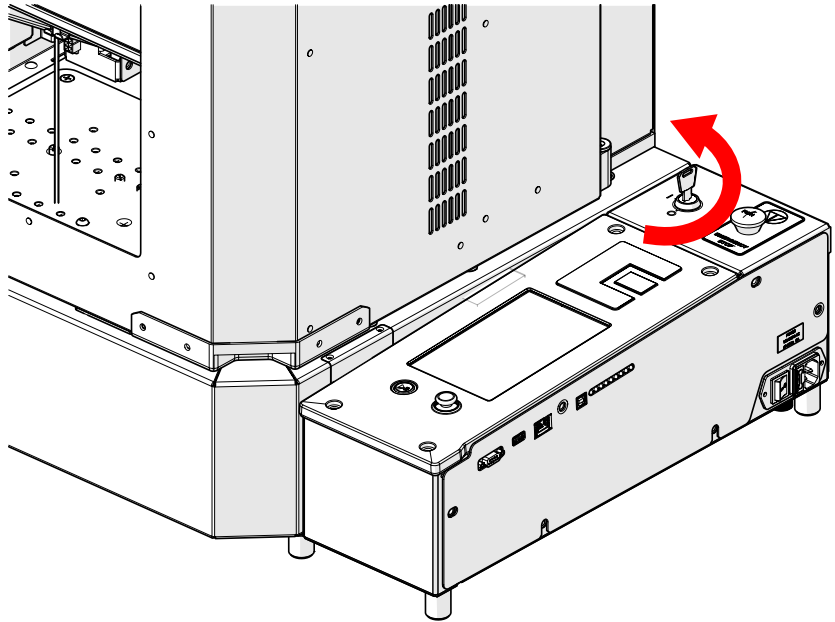


2. Lift door.

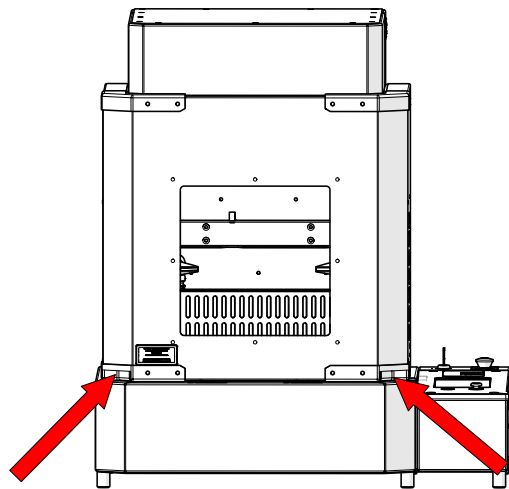


3. Leave door open.

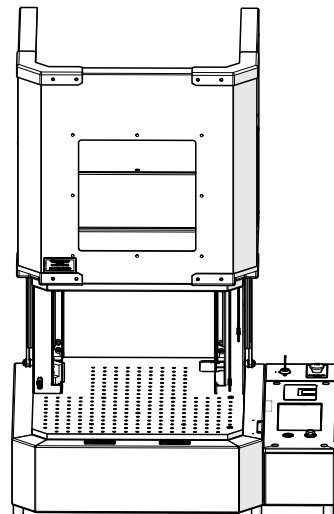


4. Loosen lens assembly.

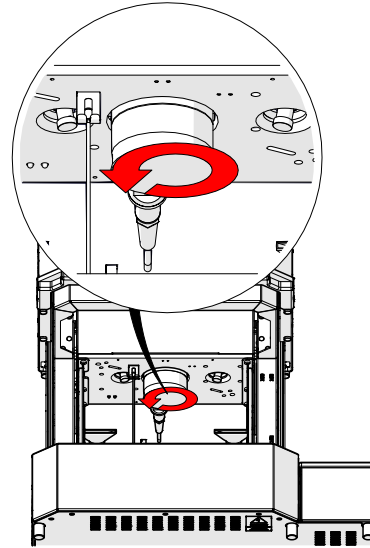


5. Remove lens assembly.

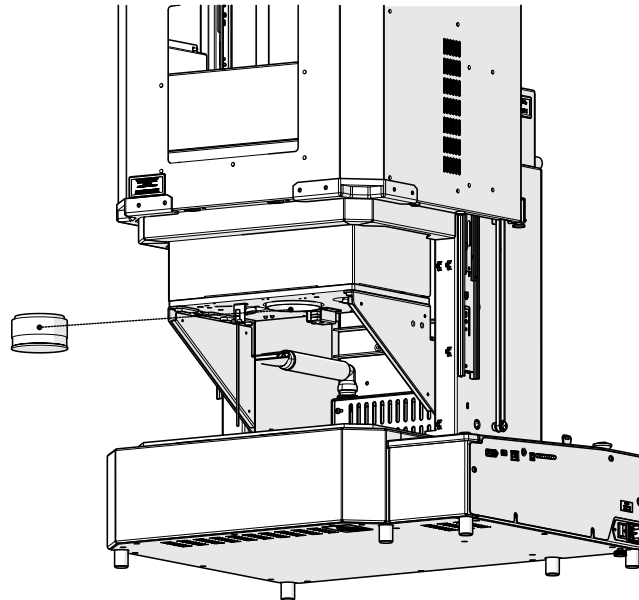


6. Separate lens assembly from lens adapter.

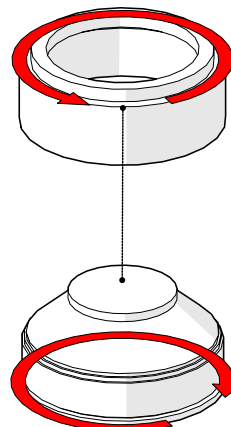


7. Place new lens assembly in lens adapter.

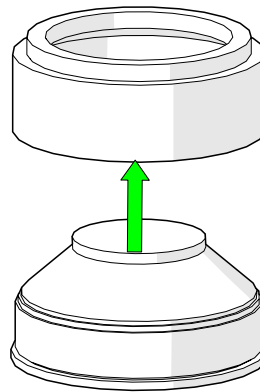


8. Tighten lens assembly and lens adapter.

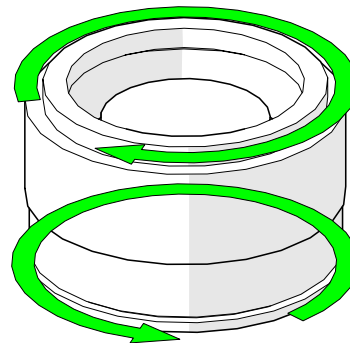

9. Position lens assembly in engraver.

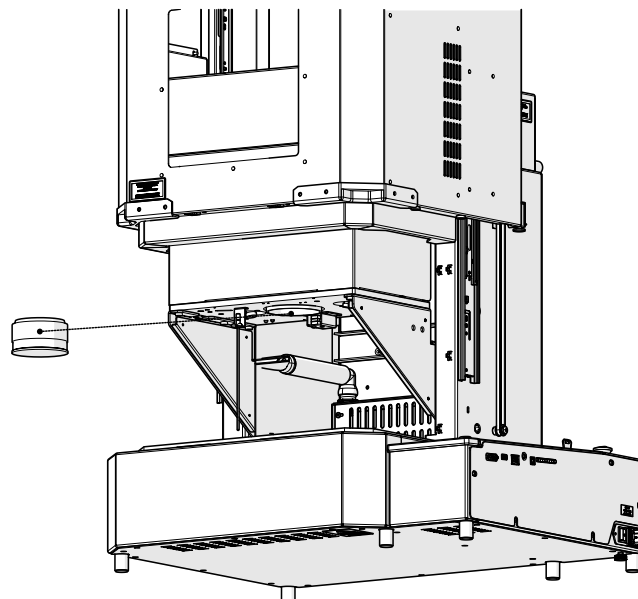

10. Tighten lens assembly.

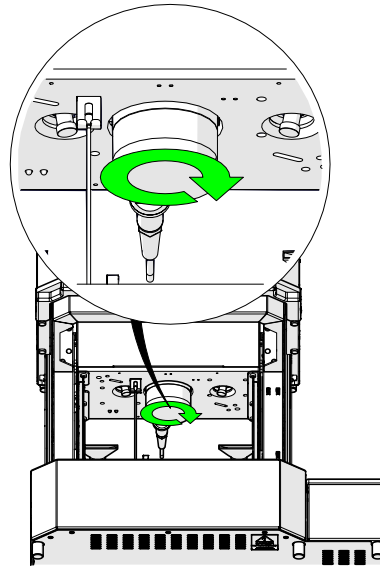

If further assistance is required, please contact Epilog Laser Tech Support by phone at 303-215-9171 or by email at [tech@epiloglaser.com](mailto:tech@epiloglaser.com).