



EPILOG LASER

16371 Table Mountain Parkway

Golden, Colorado 80403

Phone 303-215-9171 - FAX 303-277-9669

www.epiloglaser.com

Procedure Title: Replacing the power supply

Machine Type: EXT

Tools Needed: Philips Head Screw Driver
Wire Cutters

Intro:

This procedure details steps to replacing the power supply in the EXT. Before starting on this procedure disconnect the power cord from the machine.

Procedure:

1. Remove the middle and lower back service panels.



2. Disconnect the electrical lead attached to the fans and middle back service panel. Set the panels away from the machine.
3. Disconnect the five electrical connectors associated with the motor. Do not loosen or remove the P-loop holding these wires.




Disconnect
these
connectors

4. Cut the white plastic electrical tie around the leads associated with the power supply.




Cut this tie

5. Unscrew the four screws holding the power supply bracket.

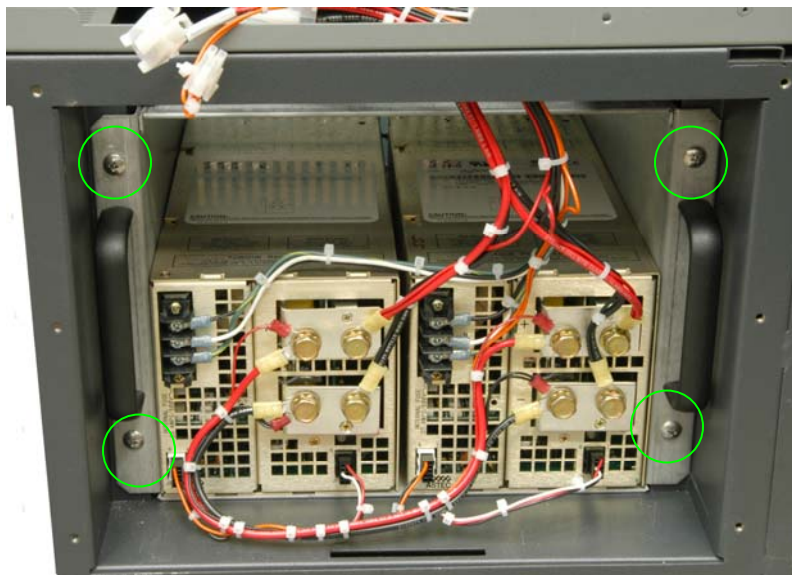


6. Using the handles, slide the power supply out of the machine.

7. Replace power supply bundle with a new power supply bundle. Ensure there is the same number of power supplies in the new bundle as was in the old.
8. Slide the power supply bundle into the machine.
9. Reconnect the five electrical connectors.

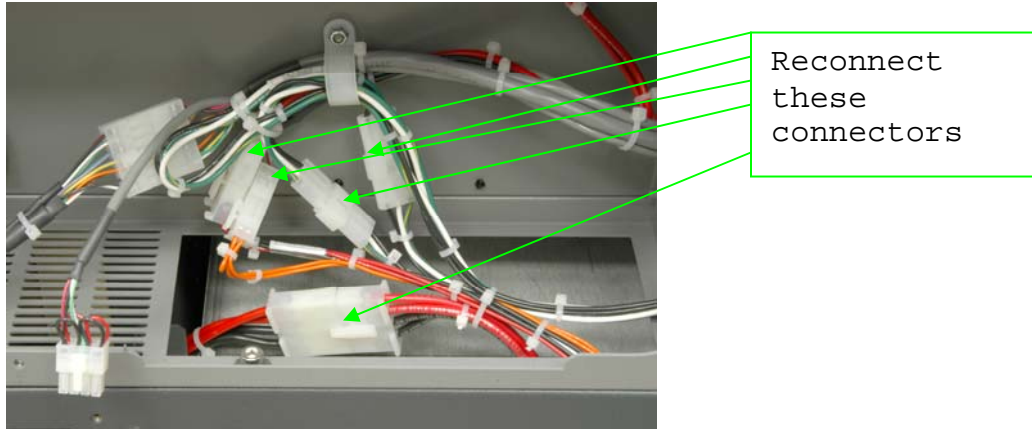

10. Tighten the four screws around the power supply bracket.

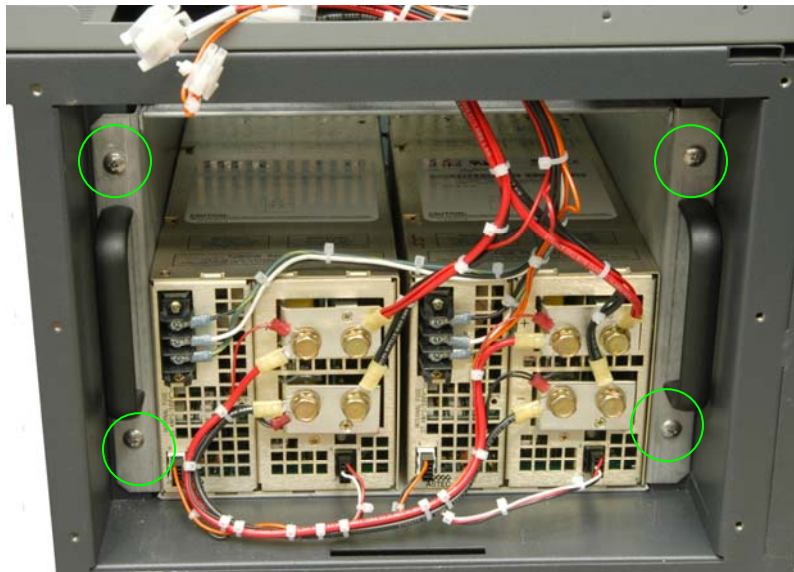

11. Replace the lower service panel.

- 12.Reconnect the lead attached to the fan and middle back service panel.
- 13.Replace the middle service panels.

If you have any questions, please contact Epilog's
Technical Support
Phone 303.215.9171
Fax 303.531.7594
E-Mail tech@epiloglaser.com