



EPILOG LASER

16371 Table Mountain Parkway

Golden, Colorado 80403

Phone 303-215-9171 - FAX 303-277-9669

www.epiloglaser.com

Procedure Title: Replacing the RF

Machine Type: Legend EXT

Tools Needed: Philips Head Screw Driver
Small flat head screw driver

Intro:

This procedure details steps to replacing the RF in the Legend EXT.

Procedure:


1. Remove the middle and lower back service panels. Disconnect the electrical connector that leads to the fans on the middle panel.



2. Disconnect the large electrical connector above the power supply.




3. Disconnect the computer cable from the side of the RF.

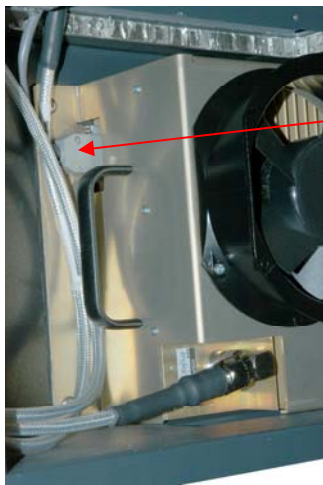


Use a small
flat head
screw
driver to
loosen the
two screws

4. Unscrew the four screws on the corner of the RF Bracket.

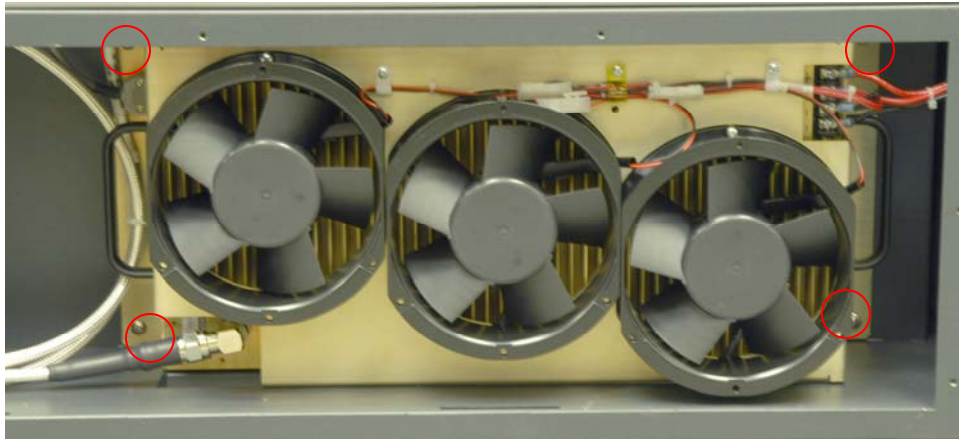


5. Using the handles, pull the RF out of the machine.

6. Disconnect the air intake

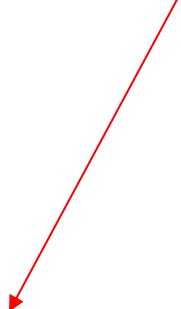




7. Replace the RF
8. Connect the air intake
9. Place the RF inside the machine
10. Tighten the four screws on the RF bracket.

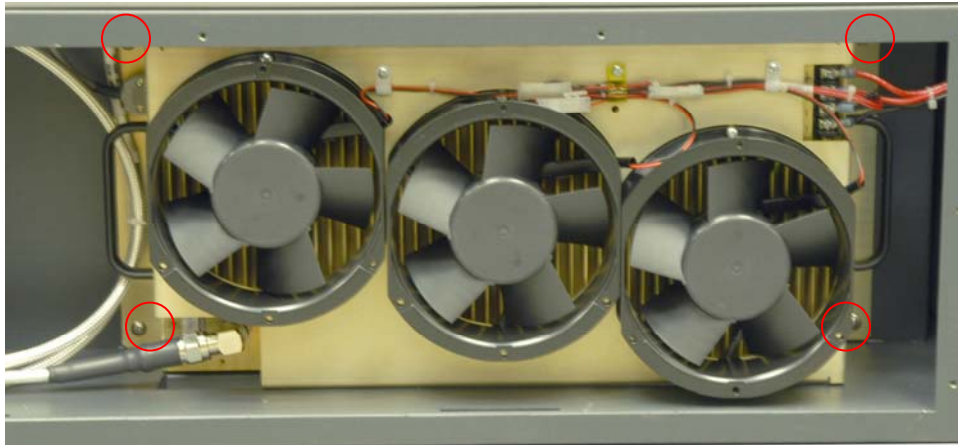

11. Reconnect the computer cable



12. Reconnect the electrical connector above the power supply.

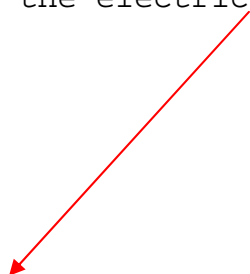



13. Replace the back panels. Remember to reconnect the electrical connector on the middle panel.

If you have any questions, please contact Epilog's
Technical Support
Phone 303.215.9171
Fax 303.531.7594
E-Mail tech@epiloglaser.com