


Joystick Calibration

Fusion Maker - Fusion Edge - Fusion Pro 24, 32, 36 & 48

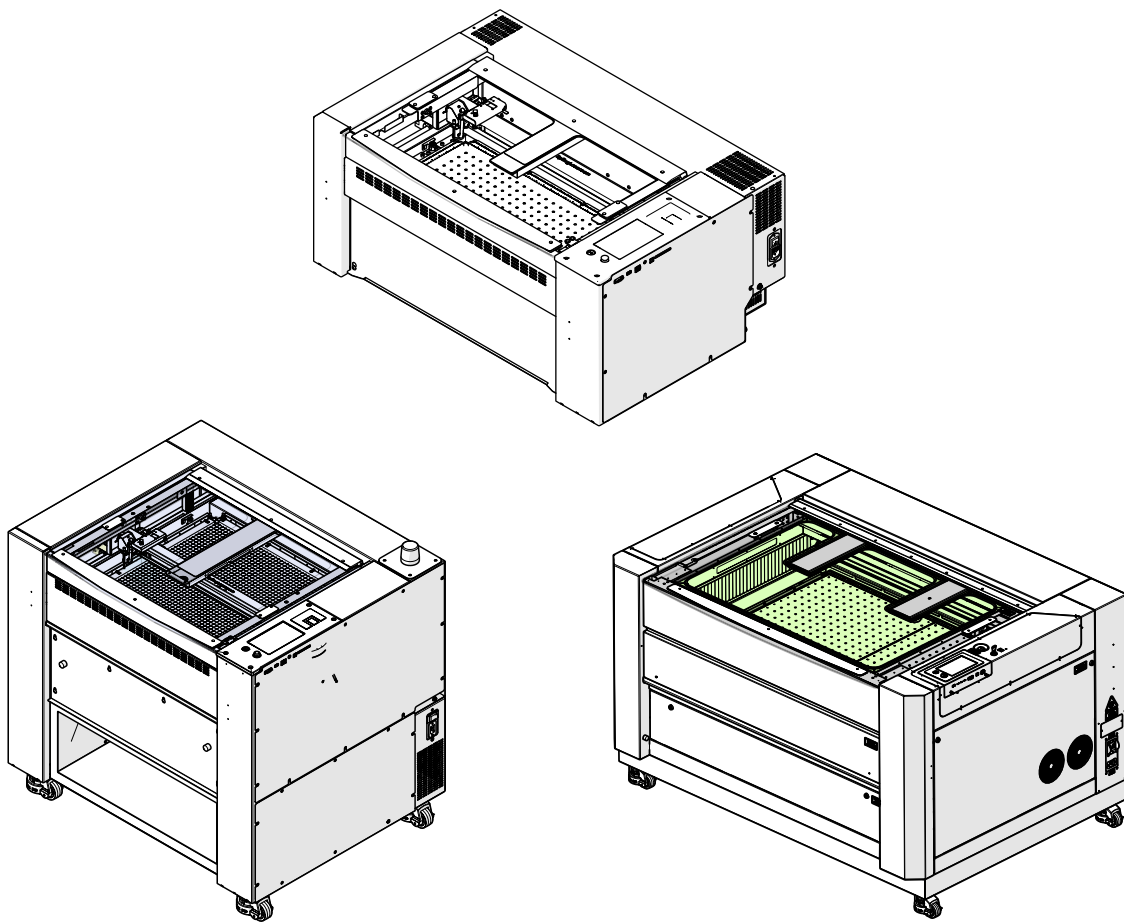

Joystick Calibration

The display calibration ensures the accuracy joystick when moving the carriage assembly and x-axis assembly. The display calibration rarely needs to be completed and should only be performed if joystick accuracy issues, delayed movements, or exaggerated movements are observed.


1. At the display panel, press the gear icon in the upper right-hand corner of the display to open the Settings menu:



2. Press and hold the word "Settings" on the touchpad to gain access to the Advanced Settings menu:




3. In the Advanced Settings menu, select Calibrate Joystick:

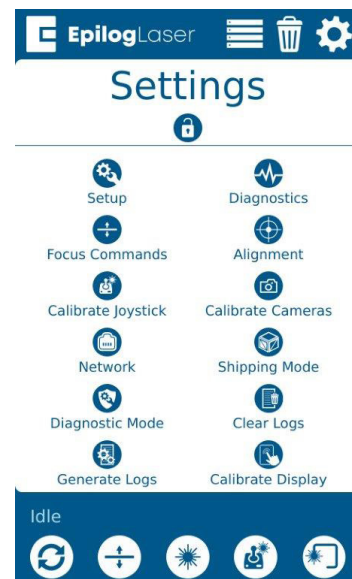

Joystick Calibration

4. Press calibrate:

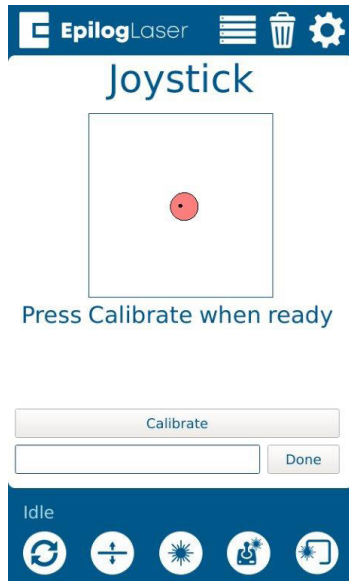

5. The engraver will prompt the user to make circles with the joystick. After a period of a few seconds, the engraver will prompt the user to let go of the joystick.
6. Once the joystick is released, the engraver will return to the Advanced Settings menu. There is no success message for this calibration procedure.

If further assistance is required, contact Epilog Laser Technical Support by phone at 303-215-9171, or by email at tech@epiloglaser.com.